Precaution Notice

Only a technician, authorized by ENERMAX, is allowed to perform maintenance service! Warranty is subject to void under unauthorized attempt to open the power case or modification of any kinds, even attempted only, of the power supply or its components!

ENERMAX will not be responsible for damages caused by following situations:

- Opening of the PSU case and/or modification of any component or cable without ENERMAX' written authorization.
- Ignoring connector's wrong insertion prevention design by attaching a connector to a device in wrong orientation.
- Connecting too many devices to one cable unit by using additional adaptor (Y cables).
- Usage of non-genuine ENERMAX modular cables.
- Damage caused by natural phenomena or uncontrollable forces, such as lightning, flooding, fire, earthquake, etc.

This ENERMAX Technology Corporation product is warranted to be free from defects in material and workmanship for a period of three (3) years from the date of purchase. ENERMAX Technology Corporation agrees to repair or replace the product, at its own option and at no charge, if, during the warranty period, it is returned to nearest ENERMAX Technology Corporation subsidiary/agent with all shipping charges prepaid and bearing a return merchandize authorization (RMA) number, and if inspection reveals that the product is defective. Charges for removing or installing the product are excluded under the terms of this warranty agreement. This warranty shall not apply to any product, which has been subject to connection to a faulty power source, alteration, negligence, or accident, or to any product, which has been installed other than in accordance with these instructions. In no event shall ENERMAX Technology Corporation, or its subsidiaries, or agents be liable for damages for a breach of warranty in an amount exceeding the purchase price of this product!

If you are uncertain whether or not your ENERMAX PSU is defective, please contact your dealer/reseller for support!

Web Site: <u>http://www.enermax.com</u> E-mail: <u>enermax@enermax.com.tw</u>

ENERMAX Technology Corporation, 15F-2, No. 888, Jing-Guo Road, Taoyuan City (330), Taiwan (R.O.C.), Tel. +886-3-316-1675, Fax. +886-3-346-6640

©2008 ENERMAX Technology Corporation. All rights reserved. Specifications are subject to change without prior notice. Actual product and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others. Reproduction in any manner without the written permission of ENERMAX is strictly forbidden.

-				i beries i			-	
	ERV85			50EWT		50EWT		250EGT
AC Input Voltage				С, 50-60Н			220-240VAC,	
· · · ·	(Maximum		range: 100-264VAC, 47-63Hz)			50-60Hz		
AC Input Current	9 – 4	4.5A		- 5A	11 –	5.5A	7.5	- 6A
	r			Output		r	r	1
	Rated	Combined	Rated	Combined	Rated	Combined		Combined
3.3V	0-25A	160W	0-25A	170W	0-25A	170W	0-25A	170W
5V	0-25A	10011	0-25A	17011	0-25A	1,0,11	0-25A	17011
12V1	0-30A		0-30A		0-30A	_	0-30A	
12V2	0-30A		0-30A		0-30A	-	0-30A	
12V3	0-30A	840W	0-30A	948W	0-30A	1044W	0-30A	1248W
12V4	0-30A	(70A)	0-30A	(79A)	0-30A	(87A)	0-30A	(104A)
12V5	0-30A		0-30A		0-30A	-	0-30A	-
12V6	0-30A		0-30A		0-30A		0-30A	
-12V	0-0.6A	7.2W	0-0.6A	7.2W	0-0.6A	7.2W	0-0.6A	7.2W
5Vsb	0-5A	25W	0-5A	25W	0-5A	25W	0-5A	25W
Total Power	850			DW		50W		50W
Peak Power	102	0W		0W		50W	15	00W
		D 11	Protec	tion Circui				
o	DC					gger range		
Over Current	3.3					- 45A		
Protection	5					- 45A		
		/3/4/5/6		. .		- 45A		
(DC)	DC			P trigger ra	-	0	P trigger	
Under Voltage /	3.3V		2.0 - 2.4 V			3.9 – 4.5V		
Over Voltage	5V		3.3 – 3.7V		5.7 – 6.5V			
Protection		/3/4/5/6		8.5 – 9.5V		13.3 – 14.5V		
	-12	-12V -8.59.5V -				-	13.3 – -14.5V	
(AC)								
Under Voltage	Activated	when AC	input volta	nge < 70VA	AC.			
Protection								
Over Power	Activated	when outp	ut power :	> 110 ~160)% of rate	d max load		
Protection			•					
Over Temperature	Activated	when DCI	[hoot sink	> 90 ~ 110	10° C / 104	2200E		
Temperature Protection	Activated	when FSC	neat sink	> 90 ~ 110	JC / 194~	- 230 г.		
Short Circuit								
Protection	Activated	when any	DC rails s	hort-circui	ted.			
	Sustain 21	V surge s	troke					
	Sustain 2KV surge stroke. Sustain up to 70A inrush current @ 240VAC at cold start.							
ENVIRONMENT								
Ten	Operation	ambient: (~122°F (fo		d output)		
Temperature	Storage ar					1 /		
I In the second second second	Operation: to 85% relative humidity, non-condensing at 25 °C/77 °F							
Humidity	Storage: to 95% relative humidity, non-condensing at 50 °C/122 °F							
OTHERS								
Cooling	One 13.5c	m two-bal	l bearing f	an, speed a	auto contro	olled.		
MTBF							°C	
NI I BF	> 100,000 hours at 70% of full rated load, 230VAC/50Hz, 25 °C (MIL-HDBK-217F standard)							
Dimension	150 (w) x 86 (h) x 190 (d) mm							
Weight	2.95kg (without modular cables) ±50g							
Safety	.				R BCMI	50W only)		
EMC	UL/cUL(Level 6), TUV, CCC, GOST, CB, BSMI(850W only)							
EMIC	CE, FCC, MIC							

ENERMAX REVOLUTION 85+ Series Power Supply Specification

User's Manual

Dear customer,

Thank you for choosing this ENERMAX REVOLUTION 85+ power supply unit (PSU)! Please read this manual carefully and follow its instructions before installing the PSU.

We would like to draw your attention that a computer required very specific conditions to work best for you without failing. To avoid failures and to increase lifetime of the system, we suggest that:

- Your system is NOT located near a radiator or any other heat producing device
- Your system is NOT located near a magnetic device
- Your system is NOT located in a moist and/or dusty and/or vibrating environment
- Your system is NOT exposed to direct sunshine
- Your system is sufficiently cooled by additional fans
- If you use AC extension cables, please make sure it can support all connected appliances' potential peak power draw. Or redistribute other high power consumption equipment, such as laser printers or monitors to other AC wall outlets. Exceeding the extension cable's loading capacity could trigger its circuit breaker and cut off the power.
- If you want to add the UPS (Uninterruptible Power Supply) for your system, please choose adequate Watts/VA capacity UPS. Ex.

PSU Model	Suggested minimum UPS output power capacity (Based on efficiency & PFC at respective load)
ERV850EWT	1000W / 1400VA
ERV950EWT	1100W / 1600VA
ERV1050EWT	1200W / 1700VA
ERV1250EGT	1500W / 2100VA

* If you intend to add other appliance powered by the same UPS, such as monitor or printer, please use higher capacity UPS according to all connected devices' rated power draw.

* Please do not mistake VA capacity as Watts, or use insufficient power UPS. This would result in less UPS battery runtime or the inability to power the system in battery mode.

COMPATIBILITY

- ENERMAX REVOLUTION 85+ series is compliant with:
 - SSI PSDG 2008/2009 Power Supply Design Guide specification and downward compatible with SSI PSDG 2008 1.0, EPS12V V2.92, 2.91 and 2.8
- This PSU does not support MB with ISA expansion slot, which might need -5V power. -5V has been cancelled from Intel ATX12V v1.3 specification onwards.

NAME OF PARTS



①Output cable: Please check "Cables & Connectors" section.
② 13.5cm fan.^{#1}
③ Honeycomb air vent.^{#1}
④ PowerGuard LED
⑤ AC Inlet ^{#2}

- 6 ON/OFF switch: (I=ON, O=OFF). #2
- #1 To ensure best system cooling, do not block PSU fan's air in-take and air vent area. This PSU offers a special HeatGuard function. When the system is turned off, or goes into ACPI S3/S4 sleep mode, the PSU fan will keep dissipating the remaining heat for 30 ~ 60 seconds and prolonging system lifetime.
- #2 When assembling or maintaining the system, please remove AC cord from AC inlet, or turn ON/OFF switch into "OFF" position, and wait PowerGuard LED light off. Then you can safely service the system.

CABLES & CONNECTORS

All connectors are designed to prevent insertion in wrong orientation. If you cannot easily insert a connector, please check if you are inserting the connector in the right orientation. Do not try by force to insert it nor modify the connectors. This might damage power supply and system components, and warranty shall be void.



Following graphic illustrates the modular sockets layout and its DC rail distribution.

• CONNECTOR TYPES

All summer	24P Mainboard Native cable, 12V rail supplied by 12V1 For new generations of ATX/EEB/CEB server/workstation MB.
1 Aler	8P CPU +12V Native cable, 12V rail supplied by 12V1 & V2 Supports multi-CPU server/workstation systems and some single socket systems.
A CONTRACT	4+4P (8P) CPU +12V, in combined mode Native cable, 12V rail supplied by 12V1 & V2 8-pin configuration supports multi-CPU server/workstation systems and some single extreme CPU systems.
ALC	 4+4P (8P) CPU +12V, in split mode Native cable, 12V rail supplied 12V1 & V2 4-pin configuration supports certain single CPU systems. Some multi-CPU workstation/server system might also need this extra 4-pin 12V connector. Please use the connector with "12V" marking.
	6+2P (8P) PCI Express, in combined mode Native cable, 12V rail supplied by 12V3 8-pin configuration supports latest extreme graphic cards, which require 8-pin PCI-E connector.
	6+2P (8P) PCI Express, in split mode / 6P PCI Express Native cable, 12V rail supplied by 12V3 6-pin configuration supports most performance PCI-E graphic cards, which require 6-pin PCI-E connector.
V	SATA ^{#1} For SATA/SAS drives.
	4P Molex ^{#2} For IDE/SCSI/SAS drives or some AGP graphic card with traditional 4P power in socket.
	FDD For floppy drive or certain add-on card.
?	FM (FAN RPM MONITOR) ^{#3} For 13.5cm fan RPM detection. Fan speed for 850 / 950 / 1050W models: 700-1500RPM (±10%). Fan speed for 1250W model: 800-1800RPM (±10%).

#1 Some SATA drives might accept SATA or 4P Molex power. Normally, use either one of power connector to power the driver, BUT NOT BOTH! Please check the drive's manual for details.

#2 Some MB might require this connector to share the +12V current from 24-pin Mainboard connector to PCI-E slot. If your MB already supports 24-pin Mainboard connector, you may not need to add the 4P Molex connector on it. Please check the MB's manual for details.

#3 Most MB offer 2 ~ 4 3-pin system/PSU fan power sockets, but only one or two socket(s) might support the fan RPM signal. If you connect the PSU FM connector on the MB, but BIOS or system monitor software cannot read the PSU fan RPM, please relocate the PSU FM connector to another socket.

• MODULAR CABLES SUPPLIED

Use ONLY genuine ENERMAX modular cables coming with ENERMAX PSU. Third party cables might not be compatible and might cause damage to your PSU and/or system, and use of third party cable shall void PSU warranty.

EMC012: 3 x 4P Molex (IDE/SCSI) drives Modular cable for IDE/SCSI/SAS drives and other peripherals.
EMC013: 3 x 4P Molex (IDE/SCSI) drives & 1 X FDD connector Modular cable for IDE/SCSI/SAS drives and peripheral, plus 1 FDD power connector.
EMC014: 2 x 6+2P (8P) PCI-E 2.0 Modular cable for 1 or 2 performance PCI Express graphic cards, which needs 6P or 8P PCI-E connector.
EMC017: 4 x SATA drives Modular cable for SATA/SAS drives like ODD and HDD.
EMC018: 8P & 4P +12V CPU/RAM power (optional) Modular cable to support special heavy-duty workstation/server with more than 4 CPUs and 16 RAMs.

- Supplied modular cables might differ by models and in different region.
- We offer more optional cables. Please visit our website for more information: <u>www.enermax.com</u>

<u>Special note for System Integrators:</u> If your system requires special modular cable configuration or design, please contact an ENERMAX sales representative.

• ATTACHING / DETACHING THE MODULAR CABLES

 Attaching the modular cable to PSU 5-pin / 12-pin connector on modular cable and PSU's modular socket has an arrow mark. To make correct connection is easy: Black connector to black socket, and red to red. Arrow mark to arrow mark. Then you can easily plug in the connector.
Detaching the modular cable from PSU 5-pin / 12-pin connector on modular cable has two hooks to lock with the PSU's modular sockets. When unplug the modular cable from PSU, please press two hooks together and gently pull out the cable.

BOOTING YOUR SYSTEM

Before booting your system, please check that:

- 1. Main power connector (24P) is properly connected.
- 2. CPU +12V power connector (4 or 8-pin configuration), and/or a 4P Molex connector (if required by MB) is properly connected.
- 3. All other needed connectors are properly connected.
- 4. AC cord is properly connected to wall outlet and PSU AC inlet.
- 5. Close your system chassis.
- 6. Turn on the PSU by switching the ON/OFF switch to "ON", and your system is ready.

PROTECTION, SAFETY & SECURITY

This PSU features PowerGuard & SafeGuard function to monitor the PSU itself. With tri-color LED, PowerGuard tells you the current PSU status. In case of abnormal situations, the power supply will automatically turn off to avoid potential danger to itself and other system components.

LED	ON/OFF	Information & what to do	
	switch		
OFF	OFF	* No AC input	
		- Turn the I/O switch to ON position. * No AC input or PSU malfunction	
OFF		- Check if AC cable is firmly plugged into wall outlet and AC inlet. If LED	
OFF	ON	still does not turn to orange light, then	
		- Contact ENERMAX service center.	
Orange	ON	PSU normal and system in standby/ sleep mode	
Green	ON	PSU normal and system in operation	
		* System abnormal, protection circuit activated.	
	ON	If you push the system power button, and PSU refuse to turn on, the LED	
		turn from orange to red light: - Short-Circuit protection activated.	
		- Short-Circuit protection activated. - Completely check if all connectors are correctly inserted, and clean the	
		chassis to prevent undesired objects, which might short circuit any	
Red		device/terminal.	
Reu		If during system operation, the PSU suddenly shut down	
		- Touch the PSU housing and check if it is hot. If yes, wait till it cool	
		down and restart the system to see if all system fans and PSU fan are	
		running. Add or replace the system fan if required. - If same situation repeat, recheck if all connectors are well connected to	
		system, or redistribute certain drives/PCI-E power to different 12V rail	
		connector.	

PowerGuard indication

If you have any question or need support, please contact your reseller or nearest ENERMAX subsidiary/agent or ENERMAX headquarter service center.

^{©2008} ENERMAX Technology Corporation. All rights reserved. Specifications are subject to change without prior notice. Actual product and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others. Reproduction in any manner without the written permission of ENERMAX is strictly forbidden.

取扱説明書

ご挨拶

この度は ENERMAX 電源ユニットをお買い上げいただき、誠にありがとうございます。電源ユニットを設置する前に、本マニュアルをよくお読みの上、正しくお使いください。

コンピュータは非常に壊れやすいシステムで、故障なく最適な動作を続けるには特定の条件 が必要になります。コンピュータの故障を避け、寿命を延ばすために、次の推奨事項に留意 してください。

- コンピュータをラジエーターやその他の熱を発生する装置の近くに置かない。
- コンピュータを磁気が発生する装置の近くに置かない。
- コンピュータを湿気や埃、振動のある環境に置かない。
- コンピュータを直射日光にさらさない。
- PC ファンを追加してコンピュータを十分に冷却する。
- 複数の AC 延長ケーブルを使って、電源を取る場合は、同じ延長ケーブル内でレーザー プリンタ、ラジエーター等、他の高電力消費装置を使用したり、延長ケーブルの安全電 流負荷基準を超えることのないようにしてください。
- 追加 UPS (無停止電源装置)を経由して電源を取る場合、接続デバイスの電力供給のため、十分なワット数とVA出力の UPS を選んでください。

型番	最高電力推測(W/VA)
ERV850EWT	1000W / 1400VA
ERV950EWT	1100W / 1600VA
ERV1050EWT	1200W / 1700VA
ERV1250EGT	1500W / 2100VA

- * 同じ UPS からモニターやプリンターなどの高電力消費装置を接続する場合、UPS の 容量は更に大きなものを使用してください。電力低下の原因となります。
- * VA とワット数を間違えないよう、また、不十分な容量の UPS を使用されないようご注意ください。UPS バッテリーモード時にシステムが動作しない原因となります。

<u>互換性</u>

- ENERMAX REVOLUTION 85+ シリーズは以下に準拠しています
 - SSI PSDG 2008・2009 パワーサプライデザインガイド及び、SSI PSDG 2008 1.0、及び EPS12V V2.92・2.91・2.8の下位互換。
- お使いの MB に ISA バスがある場合、本電源ユニットには一部の ISA デバイスをサポートするための -5v レールがないため、バスを完全にサポートできない可能性があります。 このレールは ATX12V v1.3 より廃止されました。

部品名



出力ケーブル:「ケーブルとコネクタ」の項を 参照してください 13.5cm ファン^{#1} ハニカム構造^{#1} パワーガード LED AC インレット^{#2} I/O スイッチ*:電源 I/O (オン/オフ) スイッチ (I=ON, O=OFF)^{#2}

#1 効率よく電源ユニットを冷却させるため、ファン部分や排出口が遮蔽物などにより遮られ ることの無いよう設置してください。 本電源ユニットは独自の HeatGuard (冷却システム)を搭載しております。システムをシ ャットダウンした後や、ACPIS3/S4のスリープモードに移行した後、システムの余熱を 取り除きハードの寿命を延ばす為、30~60秒の間電源ユニットのファンが回転を続けます。

#2 ハードの取り外しやメンテナンスを行う際、電源ユニットの I/O スイッチを OFF にし、 LED ランプが消えたのを確認した後、AC コードプラグを抜いてください。

<u>ケーブルとコネクタ</u>

コネクタ誤挿入防止設計です。そして、簡単にデバイスに接続できるように設計されます。 もし、簡単に挿入することができないなら、コネクタが正しい方向に挿入されているかどう かをお確かめください。コネクタを強引に差し込んだり、改造したりしないでください。電 源や PC コンポーネントの故障の原因になり、保証が無効になります。

下記の図はモジュラーソケットのレイアウトと DC レール分配の説明です。



● コネクタ類

All surgers	24P メインボード ネイティブケーブル, 12V1 新世代の ATX / BTX PC、およびデュアル CPU の EEB / CEB サーバー / ワークステ ーションボードをサポートします。
- And	8P CPU +12V ネイティブケーブル, 12V1 & V2 マルチ CPU サーバー / ワークステーションシステムと、一部のシングル CPU PC システム をサポートします。
	4+4P (8P) CPU +12V, コンバインモード ネイティブケーブル, 12V1 & V2 8 ピン構成では、マルチ CPU サーバー / ワークステーションシステムと、一部の シングル CPU PC システム をサポートします。
	4+4P (8P) CPU +12V, スプリットモード ネイティブケーブル, 12V1 & V2 4 ピン構成では、ほとんどのシングル CPU システムをサポートします。 また、一部のマルチ CPU を使用したサーバー / ワークステーションシステムでは、 この拡張 4 ピンコネクタを使用するものもあります。 「+ 12V」のマーキングあるコネクタを使用してください。
	6+2P (8P) PCI Express, コンバインモード ネイティブケーブル, 12V3 8 ピン構成の PCI Express グラフィックカード用
	6+2P (8P) PCI Express, スプリットモード / 6P PCI Express ネイティブケーブル, 12V3 6 ピン構成の PCI Express グラフィックカード用
	SATA 電源コネクタ ^{#1} SATA/SAS ドライブ用
	4P Molex 電源コネクタ ^{#2} IDE/SCSI/SAS ドライブまたは、4 ピン電源ソケットを必要とする一部の AGP グラ フィックカード用
	FDD 電源コネクタ フロッピーディスクドライブ用
7	FM(ファン回転数) 電源コネクタ ^{#3} 13.5cm ファン回転数測定用 850/950/1050W モデル:700-1500RPM (±10%). 1250W モデル: 800-1800RPM (±10%).

- #1 一部の SATA ドライブは、SATA と 4PMolex の 2 種類を接続することが可能です。そのようなドラ イブの場合、一種類の電源コネクタのみを接続してください。ドライブの取扱説明書を参照してく ださい。
- #2 一部 20 ピンのメインコネクタを持つマザーボードは、グラフィックカード用に 4 ピン Molex コネ クタを使用する場合がございます。24 ピンのメインコネクタを持つマザーボードの場合は 4 ピン Molex コネクタを使用しなくても問題はありません。詳細はマザーボードの取扱説明書をご確認く ださい。
- #3 殆どのマザーボードは2~4 つの3ピンファン電源供給用コネクタが付属されております。しかし ファンの信号を感知するのはその中の1~2つです。FM コネクタをマザーボードに挿しても BIOS 上でファン回転数がモニタリングできない場合、別の場所に接続してみてください。

● モジュラーケーブル

付属されている正規の ENERMAX モジュールケーブルだけを使用してください。それ以外のケーブ ルは互換性がない可能性があり、電源ユニットやシステムへの損傷をもたらす恐れがあり、保証対 象外となります

	EMC012: 3 x 4P Molex (IDE/SCSI) ドライブ IDE/SCSI/SAS ドライブまたはその他の周辺機器用モジュラー ケーブル
	EMC013: 3 x 4P Molex (IDE/SCSI)ドライプ&1 X FDD コネク タ 3 つの IDE/SCSI/SAS インターフェースおよび周辺 機器 +1 x FDD 電源コネクタ用モジュラーケーブル
	EMC014: 2 x 6+2P (8P) PCI-E 2.0 1 枚か 2 枚の高性能の PCI Express グラフィックカードをサポ ート。(6 ピンか 8 ピン PCI-E コネクタが必要。)
5	EMC017: 4 x SATA ドライブ ODD と HDD などの 4 つ SATA/SAS ドライブ用モジュラーケー ブル
	EMC018: 8P & 4P +12V CPU/RAM(オプション) 4CPU や 16 枚の RAM を搭載可能な特殊サーバー/ワークステ ーションをサポート

- 同梱されているモジュラーケーブルは型番により若干異なります。
- 上記以外のケーブルをお探しのお客様は弊社 Web サイト <u>www.enermax.com</u>にてご確認くだ さい。

システムインテグレーター様へ: もしシステムによって特別なモジュラーの構成や特殊なデザインを 必要とする場合は ENERMAX 販売代理店または当社までお問い合わせください。.

● モジュラーケーブルの取り付け/取り外し

	 モジューラーケーブルを電源ユニットに取り付けます モジュラーケーブルの5ピン/12ピンコネクタと電源ユニットのモジュラーソケットの表面には、白い矢印のマークがあります。 正しく接続するステップは簡単です: 黒いコネクタは黒いソケットに、赤いコネクタは赤いソケットに接続してください。 2. 矢印マークが向かい合うように接続してください。
No. of the second secon	2. χ にマークが向かれ合うように接続してくたされ。 3. Step1 と 2 を確認してくだされ。
	電源ユニットからモジュラーケーブルを取り外します モジュラーケーブルの上下にある爪を押して開きます。 開いた状態で電源ユニットのソケットから引き抜いてください。 簡単に取り外すことができます。

<u>システムの起動</u>

電源を入れる前に、以下のことを再度ご確認ください。

- 1. メイン電源コネクタ 24 ピンは適切に接続されているか。
- CPU +12V 電源コネクタ(4 ピンあるいは8 ピンの構成)は適切に接続されているか、または4 ピン Molex 電源コネクタ(MB に必要される場合)は適切に接続されているか。
- 3. その他の電源コネクタは適切に接続されているか。
- 4. AC コードは適切にコンセントと電源ユニット AC インレットに接続されているか。
- 5. PC のサイドパネルは閉じているか。
- 6. I/O スイッチが「I」に設定されており、PC の起動準備が完了しているか。

<u>保護、安全、およびセキュリティ</u>

本電源ユニットは最新の PowerGuard(パワーガード)システムを搭載しております。3 種類の LED によって電源ユニットのステータスを表示します。異常な状態の場合、パワーガードが電源をオフにしシステムを保護します。パワーガードに関する詳細は下記を参照してください。

PowerGuard(パワーガード)機能

LED	ON/OFF	小七代	
LED	スイッチ	状態	
無点灯	OFF	* AC 入力なし - I/O スイッチを ON の状態にしてください。	
無点灯	ON	* AC 入力なしまたは、電源が動作していない - 電源プラグがしっかりと挿し込まれているかチェックしてください。挿し込まれていても LED がオレンジに変わらない場合はご購入元または ENERMAX 販売代理店、当社サポートにお問い合わせください。	
オレンジ	ON	システムオフまたはスタンバイモード時。 +5Vsb のみの出力となります	
グリーン	ON	電源およびシステム通常運転	
レッド	ON	 * システムに異常があり保護回路が働いている システムの電源スイッチを入れても LED がオレンジから赤に変わる場合 - 電源異常で保護回路が働いている - 全てのコネクタが正しく挿入されているかどうか確認してください。電源ユニットを清掃してください。 システム動作中突然電源がシャットダウンする - 電源ユニットに触って温度を確認します。非常に高温になっている場合は、ケースのファンや電源ユニットのファンの不具合や、コンピュータの不適切な置き場所(本マニュアルの冒頭にある推奨事項を確認してください)が原因で熱くなった可能性があります。 - 電源ユニットの熱が冷めるまでしばらく待ちます。 - AC コードをコンセントおよび電源ユニットの AC 入力に再度接続します。 - 全てのファンが作動していることを確認します。 大況が変わらない場合、再度コネクタの挿入を確認し、PCI-E コネクタの 12V ラインを他のラインに変更します。 	

ご質問やサポートが必要な場合、ご購入元または ENERMAX 販売代理店、当社サポートにお問い合わせください。

安全上のご注意

- 危険防止のため、電源ユニットを開けることは絶対におやめください。
- 無断で電源ユニットを開けると保証対象外となりサポート受付が不可能となります。
- 製品保証規定について 弊社 Web サイト http://www.enermaxjapan.com を参照ください。

本書に記載されている事項は事前通告無しに変更されることがあります。

© 2008 すべての著作権は ENERMAX Technology Corporation にあります。 ENERMAX からの書面によ る許可なく本書の複写、転載を禁じます。