

## UCAP series

User's manual


### > Package contents :

- |                       |                        |
|-----------------------|------------------------|
| 1. Fan * 1            | 2. Isolator-mounts * 6 |
| 3. 3-4 pin adaptor *1 | 4. User's manual       |

### > Product view




LED on/off

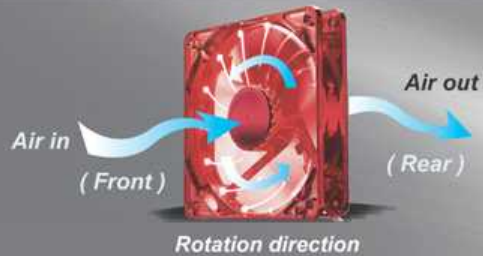

### > Installation

- How to install isolator-mounts: Please refer to step (A) and (B)

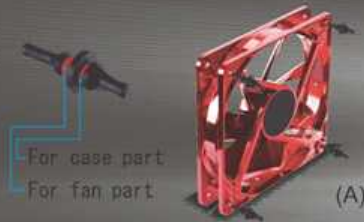

Please install the isolator-mounts on the fan



Fasten the isolator-mounts on case

### • How to power the fan

Connect the 3-pin connector to the mainboard  
Or attach the enclosed 3-4 pin adaptor to your power supply



3-pin connector



3-4pin adaptor

### • How to use auto speed control

Put the thermal sensor to the place you need, and the fan speed will be automatically adjusted



Thermal sensor

### • How to detach the fan blades

Carefully push out the fan blade with your thumb in the inner area



back view



side view

### • How to reattach the fan blades

Press the center of the blades toward the frame until it clicks



**Note:**  
Please keep circular type LED dry when using