
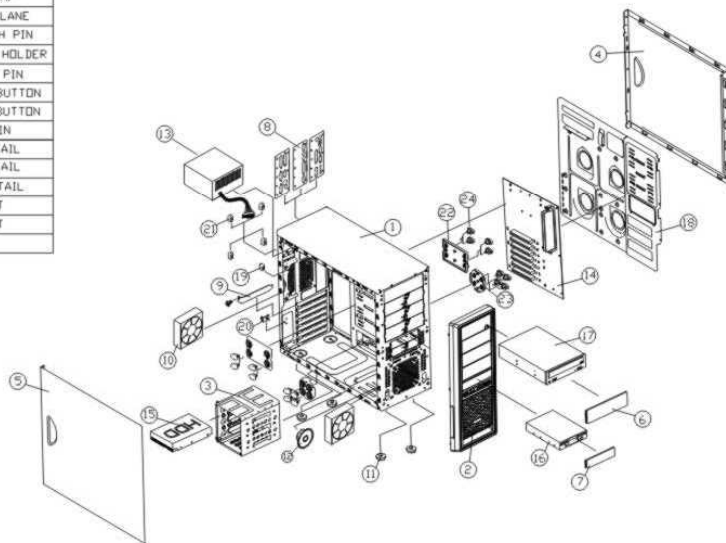


CA3030 シリーズ 取扱説明書

Your satisfaction, Our priority.

1. 分解図

NO.	DESCRIPTION	NO.	DESCRIPTION
1	BASE CHASSIS	16	3.5"-FDD
2	BEZEL	17	CD-RW
3	3-1/2" DRIVER BKT.	18	M/B PLANE
4	RIGHT-PLATE	19	SEILCH PIN
5	LEFT-PLATE	20	FIX BACK HOLDER
6	5-1/4" SHIELD	21	FIX BACK PIN
7	3-1/2" SHIELD	22	FIX CDR BUTTON
8	SLOT SHIELD	23	FIX FDD BUTTON
9	I/O PLANT	24	FIX PIN
10	8 DR 12CM FAN	25	NO.3 DETAIL
11	RUBBER FOOT	26	NO.4 DETAIL
12	SPEAKER	27	NO.10 DETAIL
13	POWER SUPPLY	28	RIVET
14	M/B	29	RIVET
15	H.D.D		



2. フロントI/Oの接続

PIN ASSIGNMENTS

Function	PIN s Mark	Signal Description
AUDIO	MIC-POWER	Microphone power
	MIC-IN	Front panel microphone input signal
	GROUND	Ground
	L-OUT	Left channel audio signal to front panel
	R-OUT	Right channel audio signal to front panel
	R-RET	Right channel audio signal from front panel
	L-RET	Left channel audio signal from front panel
	GROUND	Audio ground
USB		USB Connector



© 2005 Enermax Technology Corporation. All Rights Reserved.
All trademarks are the property of their respective owners. Information contained in this datasheet is subject to change without prior notice.

www.enermax.com

CA3030 シリーズ 取扱説明書


Your satisfaction, Our priority.

3. サイドパネルの取り外し

クリップを押し上げてサイドパネルのロックをはずします。



サイドパネルの取っ手を使い矢印の方向に引き、取り外します。

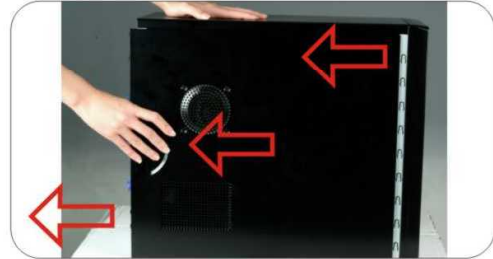

4. フロントパネルの取り外し

フロントパネルを下部から引き出して取り外します。




5. ダストフィルターの取り外し

ワンタッチでダストフィルターの取り外しができるので容易に掃除ができます。




6. ドライブベイクリップの使用方法

クリップを押しながら回転させることによりCD/DVD ROMやFD等の取付け(取外し)が可能

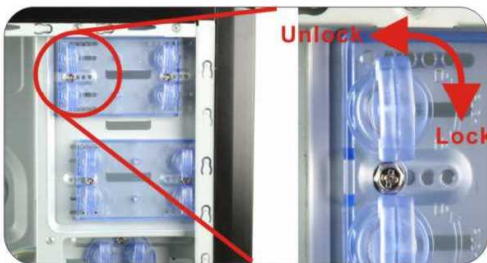

7. フロントパネルコネクタ類の接続

H.D.D LEDコネクタをマザーボードに接続してください。
+P&-P LEDコネクタをマザーボードに接続してください。
リセットスイッチコネクタをマザーボードに接続してください。※
パワースイッチコネクタをマザーボードに接続してください。※

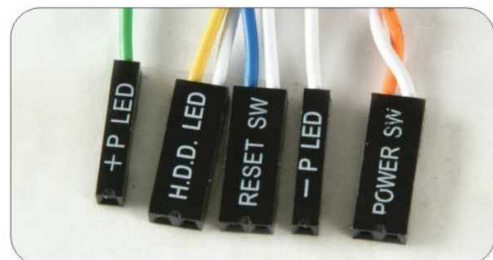

※フロントパネルコネクタ類の接続に関しましては各マザーボード会社の取扱説明書をお読みください。